

This manual and installation kit are intended for installing the snorkel on the right side of the vehicle.

1. Use the supplied template to mark the holes on the side of the vehicle.



2. Drill 4 holes for attaching the snorkel with a drill with a diameter of 10 mm. Drill the two upper holes through to the exit of the drill into the cab. For the 2 lower holes, only one outer layer of metal is drilled. Drill a hole for the pipe diam.76mm using a metal crown or cut with a jigsaw.




3. Cut a hole in the interior trim of the car with a diameter of 70 mm. Apply sealant around all 5 holes on the car body or snorkel. In the two upper holes of the snorkel attachment on the passenger side, bolts with a semicircular head and an internal hexagon are installed. When tightening these bolts, you must be careful not to allow a strong deflection of the inner panel of the body. It is advisable to install them on the thread lock.



Bolts with a regular head are installed in the two lower holes.

4. Remove the right car seat. Remove the engine compartment hatch on the right side.

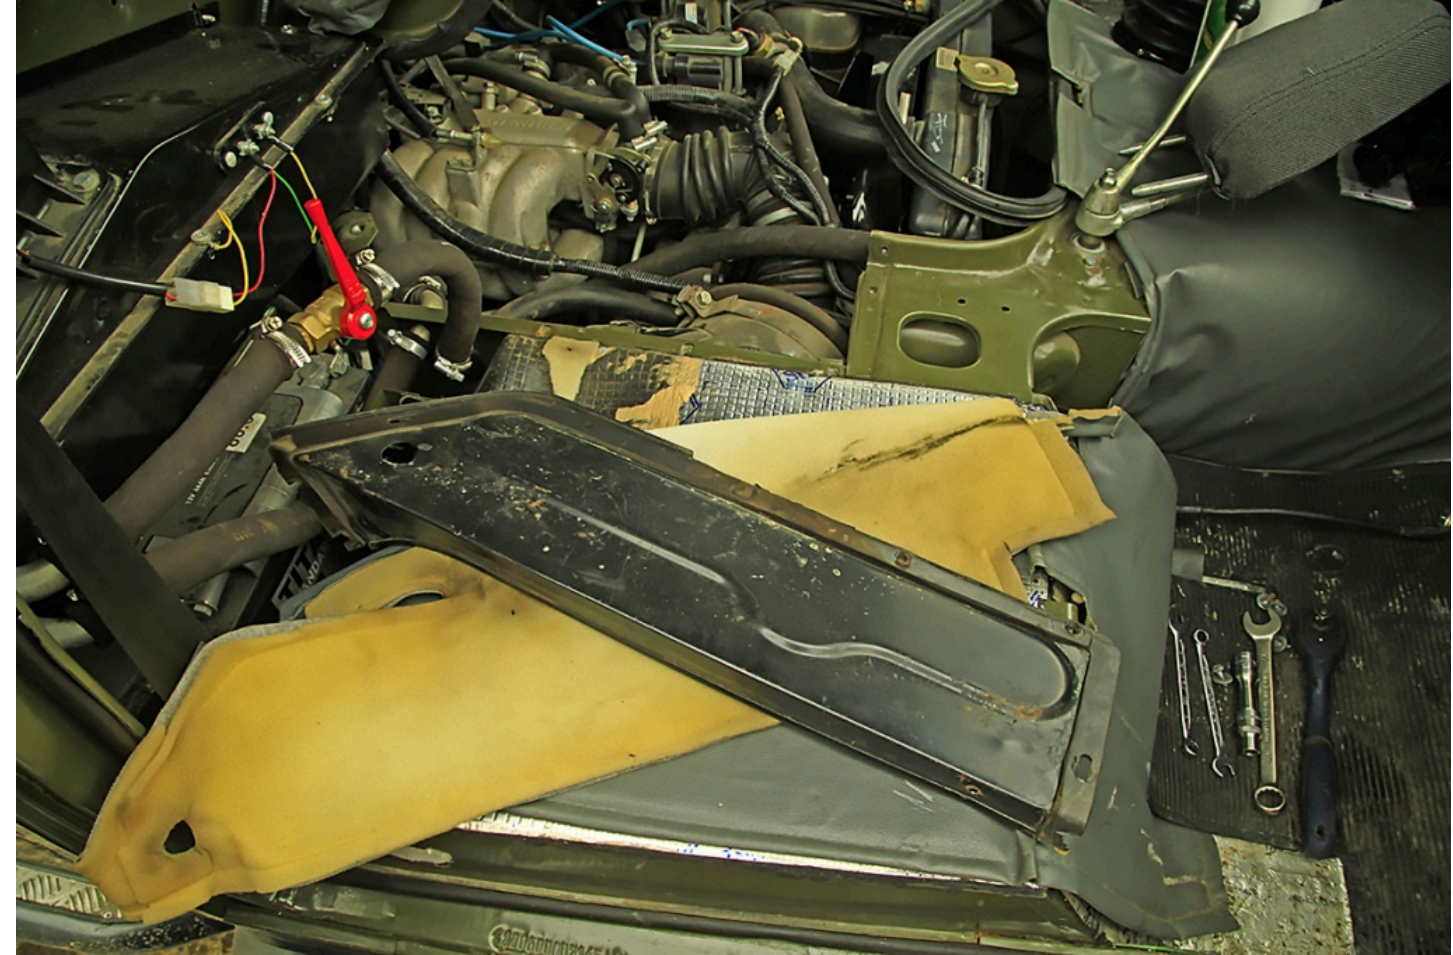


5. Drill a hole with a metal crown with a diameter of 80 mm in the corner of the niche, above the wheel arch in accordance with the photo. The center of the hole should be located at a distance of 45-50 mm. from the horizontal plane of the wheel arch. There should be a small edge on which you need to put a protective edge.
6. Remove the seat located to the right of the side door of the passenger compartment.
7. Drill a hole in the interior partition with a diameter of 80 mm. The center of the hole should be located at a distance of 500 mm from the beginning of the partition and at a height of 45-50 mm. from the floor surface.



After reaming, process the metal edge and put a protective edge on it.



8. Pull the corrugated pipe first through the hole in the passenger compartment, and then through the hole in the engine compartment. Put on the yoke and fix it to the air filter housing.

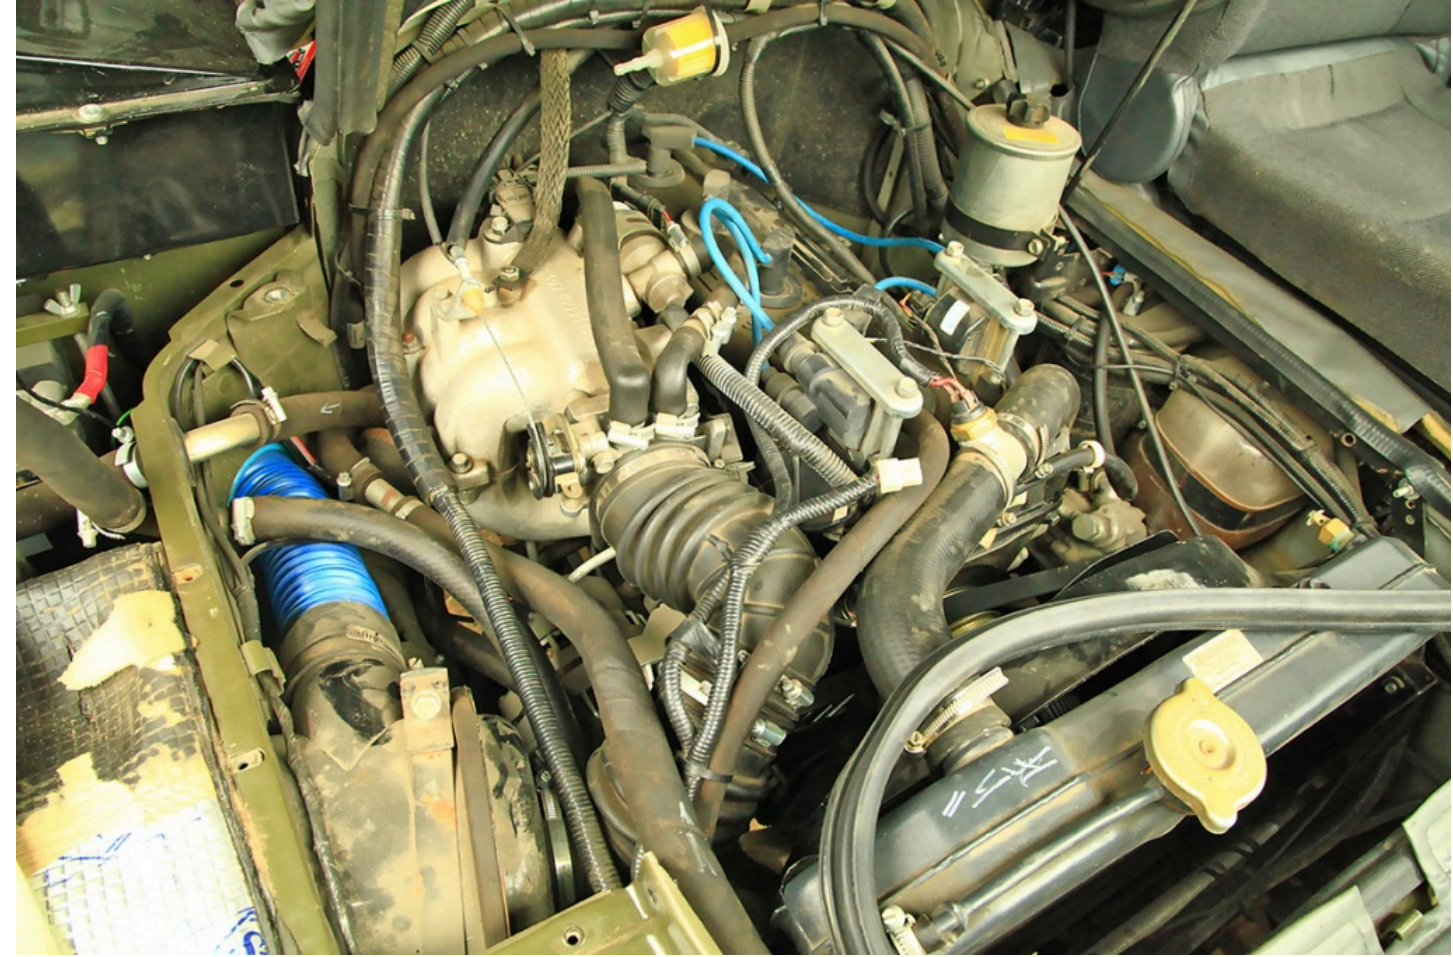

9. Cut the plastic pipe included in the kit into two parts 340mm and 60mm.
10. Install the 330mm pipe in the corrugated pipe and fix it with a clamp.
11. Connect the rubber corners with a 60mm pipe. Set the corners in accordance with the photo - connect the short end with the long one. Install the clamps, but do not tighten them.





12. Put a long rubber corner on the 340mm pipe, and a short one on the snorkel nozzle. Place the entire structure along the interior partition. Stretch the clamps.

13. Assemble the vehicle in reverse order.